
JVC



CD PORTABLE SYSTEM
SISTEMA PORTÁTIL CON REPRODUCTOR DE CDS

RC-EX20S/RC-EX20A/ RC-EX20B

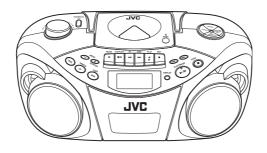





For Customer Use:

Enter below the Model No. and Serial No. which are located on the rear of the cabinet.

Retain this information for future reference.

Model No.

Serial No.

Warnings, Cautions and Others Avisos, precauciones y otras notas



DO NOT EXPOSE TO RAIN OR MOISTURE NE PAS EXPOSER À LA PLUIE NI À L'HUMIDITÉ **ATTENTION**:RISQUE DE CHOC ELECTRIQUE, NE PAS OUVRIR



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

- 1. Do not remove screws, covers or cabinet.
- 2. Do not expose this appliance to rain or moisture.

PRECAUCIÓN

Para reducir posibles riesgos de descargas eléctricas, incendios, etc, le recomendamos que:

- 1. No quite los tornillos, cubiertas ni el cabinete.
- 2. No deje expuesto este aparato a la lluvia ni a la humedad.

Caution — STANDBY/ON button!

Disconnect the mains plug to shut the power off completely. The STANDBY/ON button in any position does not disconnect the mains line

Precaución — Interruptor STANDBY/ON!

Desconectar el cable de alimentación para desactivar la alimentación totalmente. Cualquier que sea la posición de ajuste del interruptor STANDBY/ON, la alimentación no es cortada completamente.

IMPORTANT FOR LASER PRODUCTS

- 1. CLASS 1 LASER PRODUCT
- CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

IMPORTANTE PARA PRODUCTOS LÁSER

- 1. PRODUCTO LÁSER CLASE 1
- PRECAUCIÓN: No abra la tapa superior. En el interior de la unidad no hay piezas que pueda reparar el usuario; encargue el servicio a personal técnico cualificado.
- PRECAUCIÓN: Radiación láser visible e invisible en caso de apertura o con interbloqueo averiado o defectuoso. Evite la exposición directa a los haces.
- REPRODUCCIÓN DE LA ETIQUETA: ETIQUETA DE PRECAUCIÓN. COLOCADA EN EL INTERIOR DE LA UNIDAD.

CAUTION - INVISIBLE LASER RADIATION WHEN OPEN AND

INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

VORSICHT! UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN

DECKEL GEÖFFNET UND WENN

SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT

DEM STRAHL AUSSETZEN!

VARNING - OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD

OCH SPÄRR ÄR URKOPPLAD STRÅLEN ÄR FARLIG.

ADVARSEL - USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ

UDSÆTTELSE FOR STRÅLING.

CONTENTS

FEATURES 1	PLAYING COMPACT DISCS	8
SAFETY PRECAUTIONS 1	RADIO RECEPTION1	2
HANDLING PRECAUTIONS2	CASSETTE PLAYBACK 1	4
POWER SUPPLY 3	RECORDING1	6
NAMES OF PARTS AND CONTROLS4	MAINTENANCE 1	8
TURNING THE UNIT ON/OFF5	TROUBLESHOOTING1	9
SETTING THE CLOCK6	SPECIFICATIONS2	0
ADJUSTING THE SOUND7		

FEATURES

- 1 Portable system incorporating CD player 8-cm (3-3/16") CD playback capability
- Digital LCD (Liquid Crystal Display) indicates general playback status.
- 3 Synchronized recording with CD playback
- 4 Hyper-Bass Sound effect

SAFETY PRECAUTIONS

Prevention of Electric Shocks, Fire Hazards and Damages

- Even when the STANDBY/ON button is set to STANDBY, a very small current will flow. When the unit is turned on, the display window lights in orange. When the unit is in standby mode, the display window turns off. (Note, however, that the display window does not light even when the unit is turned on if the unit is operated on batteries.) To save power and for safety when not using the unit for an extended period of time, disconnect the power cord from the household AC outlet.
- Do not handle the power cord with wet hands.
- When unplugging from the wall outlet, always grasp and pull the plug, not the power cord.
- Consult your nearest dealer when damage, disconnection, or contact failure is found with the cord.

- Do not bend the cord sharply, or pull or twist it.
- Rating label is placed on the exterior of the bottom.
- Do not modify the power cord in any manner.
- Do not remove screws to disassemble the unit and do not touch anything inside the unit to avoid accidents.
- Do not insert any metallic objects into the unit.
- Unplug the power cord when there is a possibility of lightning.
- If water gets inside the unit, unplug the power cord from the outlet and consult your dealer.
- Do not block the ventilation holes of the unit so that heat can escape.
- Do not install the unit in a badly ventilated place.

HANDLING PRECAUTIONS

Do not use this unit in direct sunlight or leave the unit in a closed automobile (or yacht, etc.) where it would be exposed to high temperatures above 40° C (104° F).

1 Avoid using the unit in the following places:

- Where the temperature may become excessively high or low; the recommended temperature range is 5°C (41°F) and 35°C (95°F).
- Where it could be subject to vibrations.
- Where it is excessively humid, such as in a bathroom.
- Where it could be magnetized by a magnet or speaker.

2 Pay attention to dust.

Be sure to close the disc door so that the lens is not contaminated by dust. Do not touch the lens.

3 Condensation

Condensation may occur in the following cases, in which the unit may not operate correctly:

- The unit is in a room where a heater has just been switched on.
- The unit is in a place where there is smoke or high humidity.
- The unit has just moved from a cold place to a warm room.

In these cases, set the STANDBY/ON button to ON and wait one or two hours before use.

4 Volume control

Compact discs produce very little noise compared with analog records. If you adjust the volume by listening to the noise as you do with analog records, the speakers could be damaged by a sudden blast of sound when playback starts. Therefore, turn down the volume before starting and adjust it as required while playing a CD.

5 Safety mechanism

The unit incorporates a safety interlock mechanism which switches off the laser beam when the disc door is opened.

6 Do not place magnetic objects such as cassette tapes near the speakers.

Since the speakers contain magnets inside, do not place cassette tapes or magnetic cards nearby as recorded data could be erased.

7 Keep the unit away from the TV.

When the unit is used near a TV, the TV picture could be distorted. If this happens, move the unit away from the TV. If this does not correct the situation, avoid using the unit when the TV is turned on.

8 Cleaning the cabinet

If the cabinet gets dirty, wipe it with a soft, dry cloth. Never use benzine or thinner as these could damage the surface finish

9 When listening with headphones

- Do not listen at high volumes as it could damage your hearing.
- For safety, do not drive while listening with headphones.


10 Carrying handle

Do not raise or lower the carrying handle with the telescopic antenna extended, to avoid damaging the antenna. Position the carrying handle so that it does not interfere with operation.

POWER SUPPLY

Operation on household AC

The AC power cord provided with this unit has one-way connections to prevent electric shock. Refer to the figure below for correct connection.

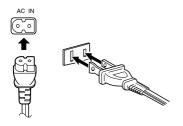


CAUTIONS:

- Use only with the JVC power cord provided with this unit to avoid malfunction or damage to the unit.
 Remove batteries when using the power cord.
- Be sure to unplug the power cord from the outlet when going out or when the unit is not in use for an extended period of time.

Operation on batteries Loading batteries


1 Open the battery cover.

Pull the battery cover toward you while pressing the sections marked by the arrows.

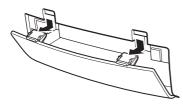

2 Insert six R20 (SUM-1)/D (13D)-size batteries.

Be sure to insert the batteries with the \bigoplus and \bigoplus terminals positioned correctly.

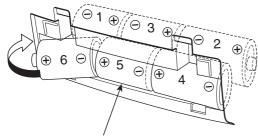

R20 (SUM-1)/D (13D)-size batteries

3 Replace the cover.

Checking batteries

When the tape speed or output sound level decreases, or CD playback becomes intermittent, replace all batteries with fresh ones.

When making an important recording, use new batteries (preferably alkaline batteries with a longer service life) to avoid any possible failure.

For better battery usage

- Continuous operation of the unit causes the battery power to be consumed quicker than noncontinuous operation.
- Operation of the unit in a cold place causes the battery power to be consumed more quickly than in a warm place.

CAUTIONS:

- When not using the unit for a long time (more than two weeks) or when using the household AC, remove the batteries to avoid a malfunction or damage to the unit.
- When the JVC power cord provided with this unit is connected, the power is automatically switched from the batteries to the household AC even when the batteries are loaded.

However, remove the batteries when using the power cord.

CAUTIONS WHEN USING BATTERIES:


When batteries are used incorrectly, it may result in the leakage of chemicals from the batteries or they may explode. The following care should be taken:

- Do not mix new and old batteries together, or mix different types of batteries.
- Do not try to recharge non-rechargeable batteries.
- Remove the batteries when the unit is not to be used for an extended period of time.

If chemicals from the batteries come in contact with your skin, wash them off immediately with water. If chemicals leak onto the unit, clean the unit completely.

NAMES OF PARTS AND CONTROLS

Top and front sides

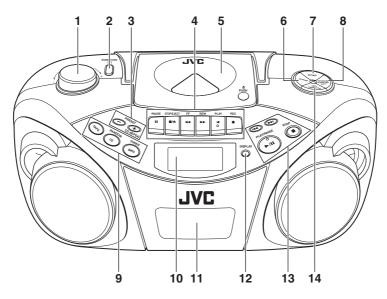

- 1 VOLUME knob
- 2 STANDBY/ON O/l button
- 3 PRESET button PRESET + / CD REPEAT button
- 4 Tape operation buttons

PAUSE II button

STOP/EJECT **■**/**≜** button

FF ◀◀ button

REW ▶▶ button

PLAY **⋖** button

REC ● button

- 5 Disc door
- 6 FM MODE button

- 7 MUTING button
- 8 PROGRAM/CLOCK SET button
- 9 TAPE button
 CD/RANDOM button
 BAND/TUNER button
- 10 Display window
- 11 Casette deck
- 12 DISPLAY button
- 13 I◀◀ button


▶▶ button

PLAY/PAUSE ►/II button

STOP **■** button

14 HBS/PRESET EQ button

Rear side

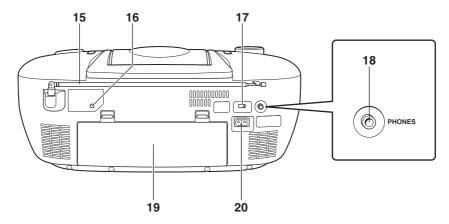


- 15 Telescopic antenna
- 16 RESET button
- 17 BEAT CUT switch
- 18 PHONES jack

Connect stereo mini headphones (3.5-mm (3/16") diameters, impedance of $16~\Omega$ to $32~\Omega$) to this jack. The speaker output is switched off with headphones connected

- 19 Battery compartment cover
- 20 \sim AC IN (AC input) jack

TURNING THE UNIT ON/OFF

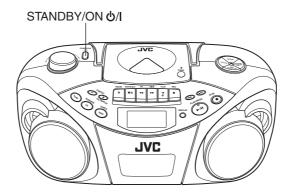

STANDBY/ON

STANDBY/ON 心/l button

Press the STANDBY/ON \circlearrowleft /l button on the unit to turn on and off the unit.

The display window lights up when the unit is turned on. (Note, however, that the display window does not light even when the unit is turned on if the unit is operated on batteries.) The unit comes on ready to play the source selected when the unit was last turned off.


To switch off the power supply completely

Unplug the AC power cord from the AC outlet. If the batteries are inserted in the unit, take them out.

Notes:

- When you unplug the AC power cord or if a power failure occurs, the clock is reset to "AM 12:00" right away, while the tuner preset stations (see page 13) will be erased in a few days. The clock indication will keep flashing until you set the clock again.
- Remove the batteries when carrying the unit by hand or in the trunk of a car. This prevents the power from being accidentally turned on, thus avoiding wasteful battery consumption.

SETTING THE CLOCK

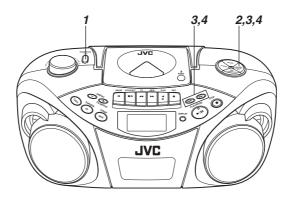

Before operating the unit any further, first set the clock built in this unit.

The clock uses 12-hour indication. "AM 12:00" indicates midnight, and "PM 12:00" indicates noon.

1 Press STANDBY/ON O'll to turn off the unit, if it is turned on.

The clock flashes on the display window.

2 Press and hold PROGRAM/CLOCK SET for more than 2 seconds.

The hour digits start flashing.



3 Press ► or ► to adjust the hour, then press PROGRAM/CLOCK SET.

The minute digits start flashing.



4 Press | ◀ or ▶► | to adjust the minutes, then press PROGRAM/CLOCK SET.

Note:

If there is a power failure, the clock loses the setting and is reset to "AM 12:00." The clock indication will keep flashing until you set the clock again.


To show the clock when CD or tuner is selected

Press DISPLAY.

Each time you press the button, the display changes the clock indication and the normal indication alternately. (Operating the unit while clock indication is displayed changes the display to the normal indication.)



ADJUSTING THE SOUND

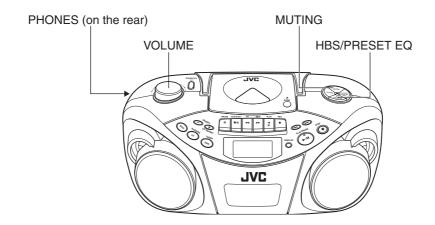

Adjusting the volume

Turn VOLUME clockwise to increase the volume or counterclockwise to decrease it.

The volume level can be adjusted in 31 steps (00 VOL to 30 VOL).



Caution:

DO NOT turn off the unit with the volume set to an extremely high level; otherwise a sudden blast of sound could damage your hearing and/or the speakers and headphones, when you turn on the unit or start playing another source next time.

REMEMBER you cannot adjust the volume unless the unit is turned on.

Turning off the sound temporarily

During playback, press MUTING.

The sound is turned off and the MUTING indicator appears in the display window.

To restore the sound, press MUTING again.

Listening through headphones

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers anymore. Be sure to turn down the volume before connecting headphones.

Reinforcing the bass sound

You can enjoy powerful bass sound with the Hyper-Bass Sound effect.

Press and hold HBS/PRESET EQ so that the HBS indicator lights up in the display window.

To turn off the effect, press and hold the button again so that the HBS indicator goes off.

Selecting the sound mode

You can select one of the 5 preset sound modes.

CLASSIC: Good for classical music.

ROCK : Boosts low and high frequency. Good for

acoustic music.

POP : Good for vocal music.


JAZZ : Good for jazz music.

FLAT : Normal sound.

To select the sound mode

Press HBS/PRESET EQ repeatedly until the indicator for the sound mode you want appears in the display window.

Each time you press the button, the sound mode changes as follows:

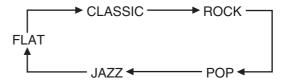

PLAYING COMPACT DISCS

Notes on compact discs

This unit has been designed only to play back the following CDs.

- Digital audio CD
- Recordable digital audio CD (CD-R)
- Rewritable digital audio CD (CD-RW)







When playing a CD-R or CD-RW

You can play back **finalized CD-R or CD-RW** recorded in **music CD format**. (If a CD-RW has been recorded in a different format, erase all the data on the CD-RW completely before recording on it.)

- You can play back CD-R or CD-RW like an audio CD.
- Some CD-R or CD-RW may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player lens is dirty.
- The reflection factor of CD-RW is lower than that of other CDs, possibly causing CD-RW to take longer time to read.
- CD-R and CD-RW of MP3 format cannot be played back.

Handling discs

Since dirty, damaged or warped discs could damage the unit, care should be taken of the following:

- Do not touch the reflective recorded surface.
- Do not stick or write anything on the label side.
- Do not bend discs.

Storage


- After removing a disc from the unit, be sure to put it back in its case.
- Do not expose discs to direct sunlight, high temperatures from a heater, etc., high humidity or dust.

Cleaning discs

Before loading a disc, wipe off any dust, dirt or fingerprints with a soft, dry cloth. Discs should be cleaned by wiping radially, from the center to edge. Never use thinner, benzine, record cleaner or antistatic spray. Removing the disc from its storage case and replacing it



Press the center and lift out.

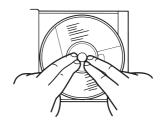

Press to secure the disc.

Handling



Incorrect

Cleaning




Correct



Incorrect

Basic operation

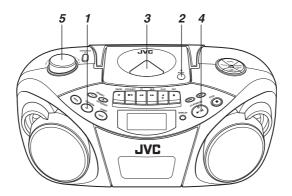

- 1 Press CD/RANDOM to enter CD mode, if the unit is in TUNER or TAPE mode.
- **2** Press \triangleq PUSH to open the disc door.
- 3 Load a disc with the label side facing up and close the disc door.
 - 8-cm (3-3/16") CD can be played on the unit without an adapter.
- 4 Press PLAY/PAUSE ►/II to start playback.

The current track number and elapsed playing time are displayed during playback.



5 Adjust the volume.

Notes:

• The following indication may be displayed when the disc is loaded upside down. Reload the disc correctly.



- If mistracking occurs during playback, lower the volume.
- Mistracking may occur if a strong shock is applied to the unit or if it is used in a place subject to vibrations (e.g. in a car travelling on a rough road).
- If you press CD/RANDOM while in CD mode, the unit enters the random playback mode.

To stop playback

Press STOP ■.



Caution:

Stop playback before opening the disc door. Check that the disc has completely stopped rotating before unloading the disc.

To pause playback

Press PLAY/PAUSE ►/II during playback.

To resume playback, press the button again.



Skipping

• To skip back to the previous track

During playback, press ► once to return to the beginning of the current track, press twice to skip back to the beginning of the previous track.

• To skip to the next track

During playback, press ►►I to skip to the beginning of the next track.




Search – locating a desired position on the disc

Press and hold |◀◀ or ▶▶| during playback.

Monitor the sound and release the button when the desired position is located.



Repeat/Random playback

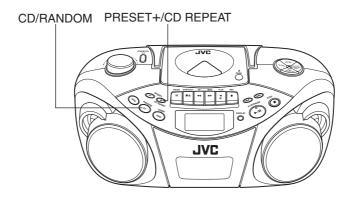

Repeat playback

Press PRESET + / CD REPEAT during playback.

Each time you press the button, the repeat mode changes in the following order:

➤ Repeat playback of all tracks on the disc ("REPEAT ALL" lights up.)

Repeat playback of a single track ("REPEAT 1" lights up.)

Repeat playback is canceled.


Random playback

Press CD/RANDOM in CD mode so that the RANDOM indicator lights up in the display window. Tracks are played in random order.

To cancel random playback, press the button again so that the RANDOM indicator goes off.

Programmed playback

Up to 20 tracks can be programmed to play in any desired order.

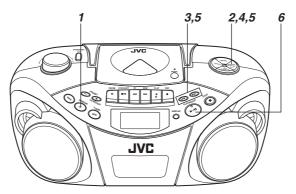

Note:

There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 2 again.

1 Press CD/RANDOM to enter CD mode.

2 Press PROGRAM/CLOCK SET in stop mode.

The PROG indicator starts blinking in the display window.



3 Press | ◀ or ▶► | to select a desired track to be programmed.



4 Press PROGRAM/CLOCK SET.

- 5 Repeat steps 3 and 4 to program other tracks.
- 6 Press PLAY/PAUSE ►/II while the PROG indicator blinks.

The tracks are played in the order you have programmed.

Notes:

- If the PROG indicator goes off before you press PLAY/ PAUSE ►/II, press PROGRAM/CLOCK SET, then start playback.
- If you press CD/RANDOM while in CD mode, the unit enters the random playback mode.

To stop during playback

Press STOP ■.

The PROG indicator goes off and the unit exits from programmed playback.

To check the program contents

Before starting programmed playback, press PROGRAM/CLOCK SET.

Each time you press the button, the programmed tracks are shown in the display window.

To add tracks in the program

- 1 Press PROGRAM/CLOCK SET repeatedly so that "00" appears as the track number.
- 2 Press |◀◀ or ▶►| to select the track number, then press PROGRAM/CLOCK SET.

To edit the program

- 1 Press PROGRAM/CLOCK SET repeatedly so that the program number you want to edit is shown.
- 2 Press |◀◀ or ▶►| to select a new track number, then press PROGRAM/CLOCK SET.

To repeat programmed playback

Press PRESET + / CD REPEAT after starting programmed playback.

To erase the entire program in the memory

Press PROGRAM/CLOCK SET so that the PROG indicator blinks, and press STOP ■ while the PROG indicator blinks.


The stored program is also cleared when the disc door is opened.

Note:

After you have programmed 20 tracks, the program number returns to "1." Programming more tracks overwrite the tracks already programmed to those numbers.

RADIO RECEPTION

Tuning in a station

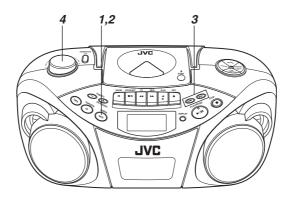

- 1 Press BAND/TUNER to enter the tuner mode.
- 2 Press BAND/TUNER to select the band, FM or AM.
- 3 Press and hold | ◀ or ▶ I for more than 1 second.

 The unit starts searching and stops when a station of sufficient signal strength is tuned in.

If you press I◀◀ or ▶▶I briefly and repeatedly, the frequency changes step by step.

4 Adjust the volume.

Changing the FM reception mode

When an FM stereo broadcast is hard to receive or noisy, reception improves in monaural reception.

Press FM MODE so that the MONO indicator appears in the display window.

To restore the stereo effect, press FM MODE again so that the MONO indicator goes off.




Note:

The FM reception mode setting will be canceled when you tune in another station.

Using the antennas

FΜ

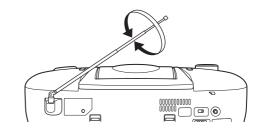

AM




Note:

The built-in ferrite core antenna may pick up interference from television receivers in the neighborhood disturbing AM reception.

Presetting stations

You can preset 10 FM and 10 AM stations.

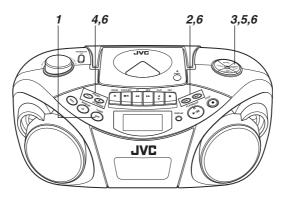

There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 3 again.

Note:


In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction. You can preset the stations you want into memory by following the presetting method.

- 1 Press BAND/TUNER to select the band, FM or AM
- 2 Press | ◀ or ▶► | to tune in the station you want to preset.
- 3 Press PROGRAM/CLOCK SET.

The PROG indicator starts blinking in the display window.



4 Press PRESET + / CD REPEAT or PRESET - to select the preset number.

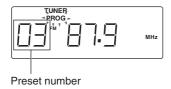

5 Press PROGRAM/CLOCK SET.

The tuned station in step 2 is stored in the preset number selected in step 4.

Storing a new station on a used number erases the previously stored one.

6 Repeat steps 2 to 5 to preset other stations, using different preset numbers.

Tuning in a preset station

- 1 Press BAND/TUNER to select the band, FM or AM.
- 2 Press PRESET + / CD REPEAT or PRESET repeatedly until the desired preset number appears.


Note:

If you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

CASSETTE PLAYBACK

Notes on cassette tapes

- Use only type-I normal tapes. The recording/playback characteristics of this unit are those for normal tapes, which have different characteristics from CrO₂ and metal tapes.
- The use of tapes longer than 120 minutes is not recommended, since characteristic deterioration may occur and these tapes easily jam in the pinch roller and the capstan.
- Loose tape may cause trouble. Gently tighten the tape with a pencil as shown in the figure below.

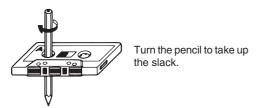


• To prevent recordings from being accidentally erased, remove the tab(s) with a screwdriver. After the tabs have been broken off, reseal the slots with adhesive tape to erase or re-record.



Loading a cassette


- 1 Press STOP/EJECT ■/▲ to open the cassette holder.
- 2 Load a cassette with the open side up and the playback side facing out as shown in the figure below.

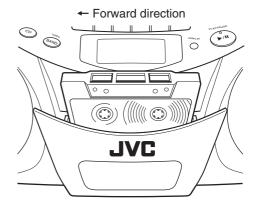

3 Close the cassette holder by pressing it gently and firmly.

The cassette holder clicks back into position.

Basic operation

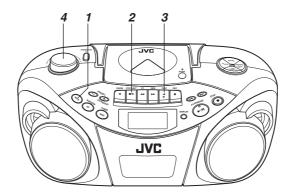

- 1 Press TAPE to enter the tape mode.
- **2** Load a cassette. Use only a type-I normal tape.
- **3** Press PLAY **◄** to start playback.
- 4 Adjust the volume.

To stop playback

Press STOP/EJECT ■/**▲**.

The tape also stops when it reaches the end.


Fast-winding a tape

Press REW ▶▶ or FF ◄◄.

When the tape reaches the end, press STOP/EJECT \blacksquare / \triangleq to release REW $\triangleright \triangleright$ or FF $\blacktriangleleft \blacktriangleleft$.

RECORDING

Basic operation

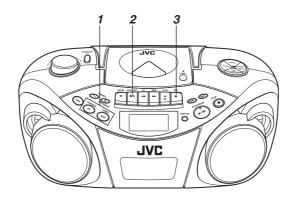

Standard recording

1 Prepare the recording source.

- When recording from the radio:
 Set to the tuner mode and tune in a desired station.
- When recording from a CD: Set to the CD mode and load a CD.

2 Load a blank or erasable cassette.

Use only a type-I normal tape.

3 Press REC ●.

PLAY **⋖** is also depressed, and recording starts.

To stop recording

Press STOP/EJECT ■/▲.

The tape also stops when it reaches the end.

Notes:

- It should be noted that it may be unlawful to rerecord pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable program and in any literary, dramatic, musical, or artistic work embodied therein.
- The recording level is automatically set correctly, so it is not affected by VOLUME. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.
- If a recording you made has excessive noise or static, the unit may have been too close to a TV which was on during the recording. Either turn off the TV or increase the distance between the TV and the unit.

Using the beat-cut function

When recording an AM broadcast, beats may occur. If this happens, change the BEAT CUT switch on the rear of the unit to either "1" or "2" to reduce the beating sound.



To start recording at the exact moment


- 1 Press PAUSE II first, then press REC ●, thus entering the record-pause (standby) mode.
- 2 Press PAUSE II to release the tape at the exact moment you want to start recording.

Note:

Do not leave the unit in pause mode for more than a few minutes. Instead, press STOP/EJECT \blacksquare / \triangleq to stop the tape.

Synchronized recording with CD playback

You can make the CD player to start playback when the tape deck enters the recording mode.

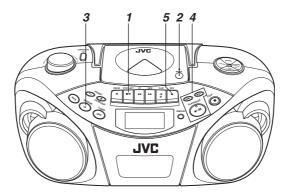

1 Load a cassette.

Use only a type-I normal tape.

- 2 Load a CD.
- 3 Press CD/RANDOM to enter CD mode.
- 4 Specify a track or point on the disc to start recording.
 - To start recording from the desired track, select the track by pressing | ◄ or ▶ ► I in stop mode.
 - To start recording from the desired point on a disc, play the disc and pause at the desired point by pressing PLAY/PAUSE ►/II.

5 Press REC ●.

PLAY \blacktriangleleft is also depressed, and synchronized recording starts.

 The CD SYNC indicator appears in the display window during synchronized recording. When the tape reaches the end first, the CD player enters the pause mode. Press PLAY/PAUSE ►/II to continue playback, or press STOP ■ to stop playback.

When the CD player stops first, the tape continues running. In this case, press STOP/EJECT ■/▲ to stop the tape.

Erasing

When recording on a pre-recorded tape, the previous recording is erased and only the new recording is heard next time the tape is played back.

To erase a tape without making a new recording

1 Press TAPE on the unit to enter the tape mode.

2 Press REC ●.

MAINTENANCE


Cleaning the heads, capstan and pinch roller

Cleaning is important!

When the tape is running, magnetic powder and dust naturally accumulate on the heads, capstan and pinch roller. When they become too dirty;

- · Sound quality deteriorates.
- The sound output level drops.
- The previous recording is not completely erased.
- Recording is not performed satisfactorily.

To avoid these, clean the heads, capstan and pinch roller every 10 hours of use.

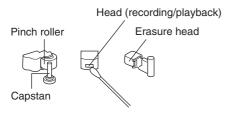

Open the cassette holder. Clean the heads, capstan and pinch roller.

For effective cleaning, use a cleaning kit available at an audio store.

After cleaning, make sure that the cleaning fluid has dried completely before loading a cassette.

Cautions:

- Keep magnets and metallic objects away from the head. If the head becomes magnetized, noise will increase and the sound will deteriorate.
- Demagnetize the recording/playback head every 20 to 30 hours of use with a head demagnetizer available at an audio store. When demagnetizing the head, the unit should be turned off.

As the erasure head of the unit is of magnetic type, do not demagnetize it.


 Do not use anything other than alcohol for cleaning. Thinner and benzine will damage the rubber pinch roller.

Cleaning the CD pickup lens

If the CD pickup lens is dirty, the sound may be degraded.

Open the disc door and clean the lens.

Use a blower (available at a camera store, etc.) to blow off dust on the lens.

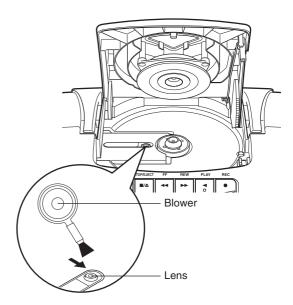

TROUBLESHOOTING

- If you are having a problem with your unit, check this list for a possible solution before calling for service.
- If you cannot solve the problem from the hints given here, or the unit has been physically damaged, call a qualified person, such as your dealer, for service.


Symptom	Possible cause	Action
Power cannot be turned on.	The power cord is unplugged.	Connect the power cord.
When PLAY ◀ is pressed, tape does not move.	PAUSE II is pressed.	Press PAUSE II again to release it.
Playback sound is at a very low level.	Batteries are run down. The head is dirty.	Replace the batteries with new ones. Clean the head.
REC ● does not function.	 The safety tabs of the cassette have been broken off. No cassette is loaded. 	Reseal the slots with adhesive tape. Load a cassette.
The disc is loaded but does not play.	 The disc is upside down. The disc is dirty. The disc is damaged or warped. The lens is dirty. There is moisture condensation. 	 Load the disc with the label side facing up. Clean the disc. Replace the disc with a playable one. Clean the lens. Turn the unit on and wait one or two hours before use.
No sound from the speakers.	Headphones are conneced.	Disconnect the headphones.
Since the tape speed is irregular, wow and flutter occur.	The pinch roller or capstan is dirty. Batteries are run down.	Clean the pinch roller and capstan. Replace the batteries with new ones.
Radio reception is poor and there is much static.	The antenna is not properly adjusted.	Adjust the antenna correctly.

Note:

When the unit is moved from a cold place of around 0°C (32°F) to a warm place, it may not operate normally, because moisture has formed inside the deck. Normal operation will be restored after waiting one or two hours.

Resetting the unit

If "TROUBLESHOOTING" does not eliminate malfunctioning (failure to operate or display properly, etc.), press the RESET button on the rear of the unit with something having a sharp point, while the unit is turned on

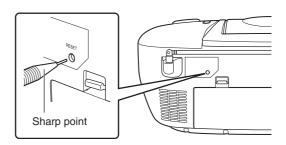

Note:

Resetting causes the unit to restore its factory default settings and results in all the settings made by the user being deleted.

SPECIFICATIONS

CD player

CD capacity : 1 CD Signal-to-noise ratio : 75 dB Dynamic range : 60 dB

Tuner

 $Frequency\ range \qquad \qquad :\ FM\ 87.5-108.0\ MHz$

AM 530 – 1 710 kHz

Antennas : Telescopic antenna for FM

Ferrite core antenna for AM

Cassette deck

Frequency response : $60 \text{ Hz} - 10\ 000 \text{ Hz}$ Wow & flutter : 0.15% (WRMS) Fast wind time : Approx. 150 sec.

(C-60 cassette)

General

Speakers : $9 \text{ cm } (3.5") \text{ cone} \times 2$

Speaker impedance : 4Ω

Accessories provided

Output power : 2 W per channel, min. RMS,

driven into 4 Ω at 1 kHz with no more than 10% total harmonic distortion

Output terminals : PHONES \times 1

Power supply : AC 120 V \sim , 60 Hz

DC 9 V (R20 (SUM-1)/D (13D)-size batteries \times 6)

Power consumption : 13 W (at operation)

3 W (on standby)

Dimensions : $420 \text{ mm} \times 178 \text{ mm} \times$

250 mm (W/H/D) (16⁹/₁₆" × 7¹/₁₆" × 9⁷/₈")

Mass : Approx. 3.2 kg (7.1 lbs) (without batteries)

: AC power cord × 1

Design and specifications are subject to change without notice.

ÍNDICE

CARACTERÍSTICAS 1	REPRODUCCIÓN DE CDs	8
PRECAUCIONES DE SEGURIDAD1	RECEPCIÓN DE LA RADIO	12
PRECAUCIONES DE MANEJO2	REPRODUCCIÓN DE CASETES	14
SUMINISTRO ELÉCTRICO 3	GRABACIÓN	16
NOMBRE DE LAS PIEZAS Y CONTROLES 4	MANTENIMIENTO	18
CONEXIÓN/DESCONEXIÓN DE LA UNIDAD 5	SOLUCIÓN DE PROBLEMAS	19
AJUSTE DEL RELOJ6	ESPECIFICACIONES	20
AJUSTE DEL SONIDO7		

CARACTERÍSTICAS

- 1 Sistema portátil con reproductor de CDs Capacidad de reproducción de discos compactos de 8cm (3-3/16")
- 2 La pantalla de cristal líquido digital (LCD) indica el estado general de la reproducción.
- 3 Grabación sincronizada con la reproducción del CD
- 4 Efecto de sonido hipergrave

PRECAUCIONES DE SEGURIDAD

Prevención de descargas eléctricas, incendio y daños

- Incluso cuando el botón STANDBY/ON está ajustado a STANDBY, circula una cantidad de corriente muy pequeña. Cuando se conecta la unidad, la ventana de indicaciones se enciende en naranja. Cuando la unidad está en el modo de espera, la ventana de indicaciones se apaga. (Sin embargo, tenga en cuenta que la ventana de indicaciones no se enciende incluso cuando se conecta la unidad si ésta funciona con pilas.) Para ahorrar electricidad y para su seguridad cuando no vaya a utilizar la unidad durante un largo período de tiempo, desenchufe el cable de alimentación del tomacorriente de CA del hogar.
- No toque el cable de alimentación con las manos húmedas.
- Cuando desenchufe de la pared, siempre tome y tire de la clavija y no del cable de alimentación.
- Consulte con su distribuidor más cercano si se produce un daño, desconexión o mal contacto en el cable.

- No doble con fuerza, tire ni retuerza el cable.
- La etiqueta de especificaciones está colocada en el exterior del fondo.
- No modifique el cable de alimentación de ninguna forma.
- No quite los tornillos para desarmar la unidad ni toque nada en el interior de la unidad para evitar accidentes.
- No inserte ningún objeto metálico en la unidad.
- Desenchufe el cable de alimentación si existe la posibilidad de que caiga un rayo.
- Si entra agua dentro de la unidad, desenchufe el cable de alimentación del tomacorriente y consulte con su distribuidor.
- No bloquee los orificios de ventilación de la unidad para que no se acumule el calor en el interior.
- No instale la unidad en un lugar con mala ventilación de aire.

PRECAUCIONES DE MANEJO

No utilice esta unidad cuando está expuesta directamente a los rayos del sol ni deje la unidad en un automóvil cerrado (o yate, etc.) donde pueda quedar expuesta a temperaturas superiores a 40°C (104°F).

1 Evite el uso de la unidad en los siguientes lugares:

- Donde la temperatura pueda subir o bajar mucho; la gama de temperaturas recomendada es de 5°C (41°F) a 35°C (95°F).
- Donde esté expuesta a vibraciones.
- Donde haya mucha humedad, por ejemplo en el baño.
- Donde pueda quedar magnetizada por un imán o altavoz.

2 Tenga cuidado con el polvo.

Asegúrese de cerrar la tapa del disco para que la lente no se ensucie con el polvo. No toque la lente.

3 Condensación

Puede condensarse humedad en los siguientes casos, en los que la unidad no funcionará correctamente:

- La unidad está en una habitación donde se acaba de encender la calefacción.
- La unidad está en un lugar donde hay humo o mucha humedad.
- La unidad se llevó de un lugar frío a una habitación caliente.

En estos casos, ajuste el botón STANDBY/ON a ON y espere una o dos horas antes del uso.

4 Control del volumen

Los CDs producen muy poco ruido en comparación con los discos analógicos. Si se ajusta el volumen cuando se escucha un ruido similar al de los discos analógicos, los altavoces pueden dañarse por una repentina subida de volumen al empezar la reproducción. Por lo tanto, baje el volumen antes de empezar y ajuste según sea necesario cuando reproduzca un CD.

5 Mecanismo de seguridad

La unidad contiene un mecanismo de seguridad de interbloqueo que desactiva el rayo láser cuando se abre la tapa del disco.

6 No coloque objetos metálicos, como cintas de casete, cerca de los altavoces.

Como los altavoces contienen imanes en su interior, no coloque cintas de casete ni tarjetas magnéticas cerca, ya que pueden borrarse los datos grabados.

7 Mantenga la unidad alejada del TV.

Cuando se utiliza la unidad cerca de un TV, la imagen del TV puede distorsionarse. En este caso, aleje la unidad del TV. Si esto no corrige la situación, evite utilizar la unidad esté encendido el TV.

8 Limpieza de la carcasa

Si se ensucia la carcasa, límpiela con un paño suave y seco. Nunca utilice bencina ni disolventes ya que pueden dañar el acabado de la superficie.

9 Cuando utilice los auriculares

- No los utilice con un volumen alto ya que puede dañar sus oídos.
- Para su seguridad, no conduzca mientras utilice los auriculares.


10 Asa de transporte

No levante ni baje el asa de transporte con la antena telescópica extendida, para evitar que se dañe la antena. Coloque el asa de transporte de tal forma que no interfiera con el funcionamiento.

SUMINISTRO ELÉCTRICO

Funcionamiento con la CA del hogar

El cable de alimentación de CA suministrado con esta unidad dispone de conexiones unidireccionales para evitar descargas eléctricas. Consulte la siguiente figura para realizar correctamente la conexión.

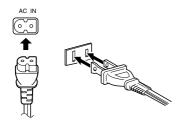


PRECAUCIONES:

- Utilice sólo el cable de alimentación de JVC suministrado con esta unidad para evitar un mal funcionamiento o daño en la unidad.
 - Quite las pilas cuando utilice el cable de alimentación.
- Desenchufe el cable de alimentación del tomacorriente cuando salga o cuando no vaya a utilizar la unidad durante un largo período de tiempo.

Funcionamiento de las pilas Colocación de las pilas


1 Abra la tapa de las pilas.

Tire de la tapa de pilas hacia usted mientras presiona las secciones marcadas por las flechas.

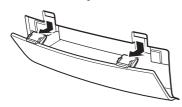

2 Coloque seis pilas R20 (SUM-1)/D (13D).

Asegúrese de colocar las pilas con los terminales 🕀 y 🕞 en la posición correcta.

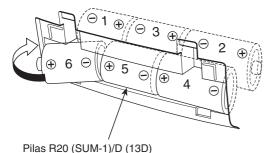

3 Vuelva a colocar la tapa.

Verificación de las pilas

Si disminuye la velocidad de la cinta o el nivel de salida del sonido, o si la reproducción de CDs es intermitente, cambie todas las pilas por otras nuevas.

Si hace grabaciones importantes, utilice pilas nuevas (preferiblemente pilas alcalinas con una vida útil más larga) para evitar posibles fallos.

Para un mejor uso de las pilas

- Un funcionamiento continuo de la unidad hace que la electricidad de las pilas se consuma más rápidamente que con un funcionamiento no continuo.
- El funcionamiento de la unidad en un lugar frío hace que la electricidad de las pilas se consuma más rápidamente que en un lugar caliente.

PRECAUCIONES:

- Si no utiliza la unidad durante un largo período de tiempo (más de dos semanas) o si utiliza la CA del hogar, quite las pilas para evitar un mal funcionamiento o daños en la unidad.
- Cuando se ha conectado el cable de alimentación de JVC suministrado con esta unidad, la electricidad cambia automáticamente de las pilas a la CA del hogar incluso cuando las pilas están colocadas.

Sin embargo, quite las pilas cuando utilice el cable de alimentación.

PRECAUCIONES AL UTILIZAR LAS PILAS:


Si se utilizan incorrectamente las pilas, pueden producirse fugas de los químicos del interior de las pilas o pueden explotar. Debe tener en cuenta lo siguiente:

- Compruebe que ha colocado correctamente los terminales positivo
 ⊕ y negativo
 ⊖ de las pilas y colóquelos tal como se indica en la figura de la izquierda.
- No mezcle pilas nuevas y viejas ni mezcle distintos tipos de pilas.
- No trate de recargar pilas no recargables.
- Quite las pilas cuando no vaya a utilizar la unidad durante largo período de tiempo.

Si los químicos de las pilas entran en contacto con su piel, lávese inmediatamente con agua. Si se producen fugas de químicos en la unidad, limpie completamente la unidad.

NOMBRE DE LAS PIEZAS Y CONTROLES

Partes superior y frontal

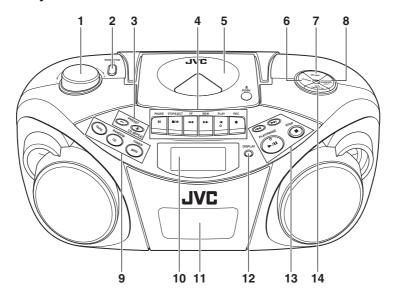

- 1 Selector VOLUME
- 2 Botón STANDBY/ON 🖰/I
- 3 Botón PRESET Botón PRESET + / CD REPEAT
- 4 Botones de funcionamiento de la cinta

Botón PAUSE II

Botón STOP/EJECT ■/▲

Botón FF ◀◀

Botón REW ▶▶

Botón PLAY ◀

Botón REC ●

- 5 Tapa del disco
- 6 Botón FM MODE

- 7 Botón MUTING
- 8 Botón PROGRAM/CLOCK SET
- 9 Botón TAPE

Botón CD/RANDOM

Botón BAND/TUNER

- 10 Visualizador
- 11 Platina de casetes
- 12 Botón DISPLAY
- 13 Botón I◀◀


Botón ▶►

Botón PLAY/PAUSE ►/II

Botón STOP ■

14 Botón HBS/PRESET EQ

Parte posterior

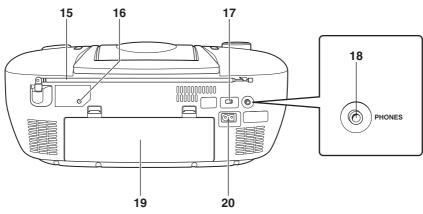


- 15 Antena telescópica
- 16 Botón RESET
- 17 Interruptor BEAT CUT
- 18 Toma PHONES

Conecte los minialtavoces estéreo (diámetro 3,5mm (3/16"), impedancia de 16 Ω a 32 Ω) a esta toma. Se desactiva la salida del altavoz cuando se conectan los altavoces.

- 19 Tapa del portapilas
- 20 Toma \sim AC IN (entrada de CA)

CONEXIÓN/DESCONEXIÓN DE LA UNIDAD

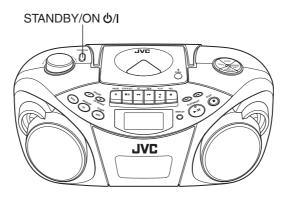

Presione el botón STANDBY/ON 🖰/l de la unidad para encender y apagar la unidad.


El visualizador se iluminará cuando se encienda la unidad. (Sin embargo, tenga en cuenta que si la unidad funciona con pilas, el visualizador no se ilumina aunque la unidad esté encendida.) La unidad está lista para reproducir la fuente seleccionada cuando se desconectó por última vez la unidad.

Para desconectar por completo el suministro eléctrico

Desenchufe el cable de alimentación de CA del tomacorriente de CA. Si las pilas están colocadas en la unidad, sáquelas.

Notas:

- Cuando desenchufe el cable de alimentación de CA o si se produce un corte de energía, el reloj se reajustará inmediatamente a "AM 12:00" y las presintonías del sintonizador (consulte la página 13) se borrarán al cabo de unos días. La indicación del reloj seguirá destellando hasta que vuelva a ajustar la hora.
- Quite las pilas cuando transporte la unidad a mano o en el maletero de un coche. Esto evita que se encienda accidentalmente la unidad evitando un consumo inútil de las pilas.

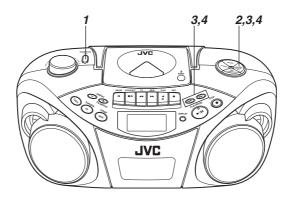

Antes de utilizar la unidad, ajuste el reloj incorporado a esta unidad.

El reloj utiliza una indicación de 12 horas. "AM 12:00" indica medianoche y "PM 12:00" indica mediodía.

1 Presione STANDBY/ON O/I para apagar la unidad, si está encendida.

El reloj parpadea en el visualizador.

2 Mantenga presionado PROGRAM/CLOCK SET durante más de 2 segundos.

Los dígitos de la hora comienzan a parpadear.



3 Presione | ◀ o ▶ para ajustar la hora y, a continuación, presione PROGRAM/CLOCK SET.

Los dígitos de los minutos comienzan a parpadear.



4 Presione | ◀◀ o ▶►| para ajustar los minutos y, a continuación, presione PROGRAM/CLOCK SET.

Nota:


Si se produce un corte de energía, el reloj pierde el ajuste y se reajusta a "AM 12:00". La indicación del reloj seguirá destellando hasta que vuelva a ajustar la hora.

Para ver el reloj cuando se selecciona CD o sintonizador

Presione DISPLAY.

Cada vez que presione el botón, el visualizador alterna la indicación del reloj y la indicación normal. (Si utiliza la unidad mientras se visualiza la indicación del reloj, la pantalla cambia a la indicación normal.)



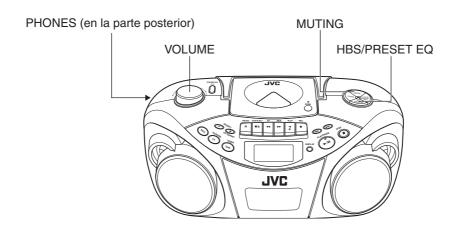

Ajuste del volumen

Gire VOLUME en el sentido de las agujas del reloj para subir el volumen, o en sentido contrario a las agujas del reloj para bajarlo.

El nivel del volumen puede ajustarse en 31 pasos (00 VOL a 30 VOL).



Precaución:

NO apague la unidad con el volumen ajustado a un nivel muy alto; de lo contrario, una subida repentina del volumen podría dañar sus oídos y/o los altavoces y auriculares la próxima vez que encienda la unidad o inicie la reproducción de otra fuente.

RECUERDE que no puede ajustar el volumen a menos que encienda la unidad.

Silenciamiento temporal del sonido

Durante la reproducción, presione MUTING.

El sonido se silencia y el indicador MUTING aparece en el visualizador.

Para recuperar el sonido, presione de nuevo MUTING.

Escucha por los auriculares

Conecte un par de auriculares en la toma PHONES.

No se emite sonido por los altavoces. Asegúrese de bajar el volumen antes de conectar los auriculares.

Refuerzo del sonido de graves

Se puede disfrutar de potentes sonidos de graves con el efecto de sonido hipergrave.

Mantenga presionado el botón HBS/PRESET EQ hasta que aparezca el indicador HBS en el visualizador.

Para desactivar el efecto, vuelva a mantener presionado el botón hasta que desaparezca el indicador HBS.

Selección del modo de sonido

Puede seleccionar uno de los 5 modos de sonido preajustados.

CLASSIC: Ideal para música clásica.

ROCK : Realza las bajas y altas frecuencias. Ideal

para música acústica.

POP : Ideal para música vocal.


JAZZ : Ideal para música de jazz.

FLAT : Sonido normal.

Selección del modo de sonido

Presione repetidamente HBS/PRESET EQ hasta que aparezca el indicador del modo de sonido deseado en el visualizador.

Cada vez que presione el botón, el modo de sonido cambia de la siguiente forma:

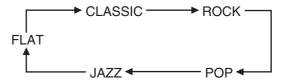

REPRODUCCIÓN DE CDs

Notas acerca de los discos compactos

Esta unidad ha sido diseñada para reproducir únicamente los siguientes CDs.

- · CD de audio digital
- CD de audio digital grabable (CD-R)
- CD de audio digital regrabable (CD-RW)







Cuando reproduzca un CD-R o CD-RW

Puede reproducir discos CD-R o CD-RW finalizados grabados en formato de CD de música. (Si un CD-RW se ha grabado en un formato diferente, borre completamente todos los datos del CD-RW antes de grabar encima.)

- Puede reproducir un CD-R o CD-RW como un CD de audio.
- Algunos CD-R o CD-RW no pueden reproducirse en esta unidad debido a las características, daños o manchas en el disco, o si la lente del reproductor está sucia.
- El factor de reflexión de un CD-RW es más bajo que el de otros CDs, y es posible que tarde más tiempo en leer un CD-RW.
- Los discos CD-R y CD-RW de formato MP3 no pueden reproducirse.

Manejo de los discos

Como los discos sucios, dañados o deformados pueden dañar la unidad, debe tener cuidado con lo siguiente:

- No toque la superficie reflectora grabada.
- No pegue ni escriba nada en la cara de la etiqueta.
- No doble los discos.

Almacenamiento

- Después de sacar un disco de la unidad, asegúrese de guardarlo en su caja.
- No exponga los discos a los rayos directos del sol, altas temperaturas de calefacción, etc., alta humedad o polvo.


Limpieza

Antes de colocar un disco, limpie el polvo, suciedad o huellas dactilares con un paño suave y seco. Los discos deben limpiarse frotando desde el centro hasta el borde. Nunca utilice disolvente, bencina, limpiador de discos o rociador antiestático.

· Para sacar el disco de su caja y volverlo a colocar.




Presione el centro y levante.

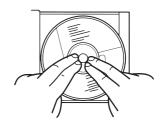

Presione para asegurar el disco.

Manejo

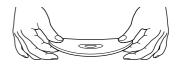

Incorrecto

• Limpieza




Correcto



Incorrecto

Funcionamiento básico

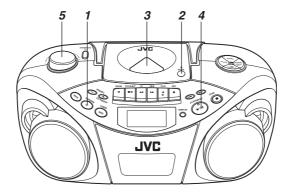

- 1 Presione CD/RANDOM para entrar en el modo CD si la unidad está en modo TUNER (sintonizador) o TAPE (cinta).
- 2 Presione ≙ PUSH para abrir la tapa del disco.
- 3 Coloque un disco con el lado de etiqueta hacia arriba y cierre la tapa del disco.
 - Pueden reproducirse CDs de 8 cm (3-3/16") en la unidad sin necesidad de adaptador.
- 4 Presione PLAY/PAUSE ►/II para iniciar la reproducción.

El número de pista actual y el tiempo de reproducción transcurrido se visualizan durante la reproducción.



5 Ajuste el volumen.

Notas:

 Puede aparecer la siguiente indicación si se ha colocado el disco al revés. Vuelva a colocar correctamente el disco.



- Si se produce un mal seguimiento durante la reproducción, baje el volumen.
- Puede producirse un mal seguimiento si la unidad recibe un golpe fuerte o si se utiliza en un lugar expuesto a vibraciones (por ejemplo, en un coche que viaja por una carretera en mal estado).
- Si presiona CD/RANDOM mientras está en modo CD, la unidad entra en modo de reproducción aleatoria.

Para detener la reproducción Presione STOP ■.



Precaución:

Detenga la reproducción antes de abrir la tapa del disco. Confirme que el disco ha dejado de girar completamente antes de sacar el disco.

Para hacer una pausa en la reproducción Presione PLAY/PAUSE ►/II durante la reproducción.

Para reanudar la reproducción, vuelva a presionar el botón.



Salto

• Para saltar a una pista anterior

Durante la reproducción, presione l◄◀ una vez para volver al principio de la pista actual y presione dos veces para volver al principio de la pista anterior.

Para saltar a la siguiente pista
 Durante la reproducción, presione ►►I para saltar al principio de la siguiente canción.




Búsqueda – localización de una posición deseada del disco

Mantenga presionado I◀◀ o ▶▶I durante la reproducción.

Escuche el sonido y suelte el botón cuando encuentre la posición deseada.



Reproducción repetida/aleatoria

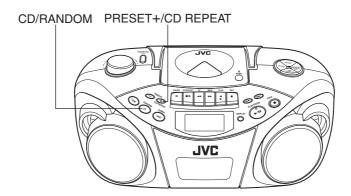

Reproducción repetida

Presione PRESET + / CD REPEAT durante la reproducción.

Cada vez que presiona el botón, el modo de repetición cambia en el siguiente orden:

→ Reproducción repetida de todas las pistas del disco (Aparece "REPEAT ALL".)

Reproducción repetida de una sola pista (Aparece "REPEAT 1".)

Se cancela la reproducción repetida.

Reproducción aleatoria


Presione el botón CD/RANDOM en el modo CD para que aparezca el indicador RANDOM en el visualizador.

Las pistas se reproducen en orden aleatorio.

Para cancelar la reproducción aleatoria, presione de nuevo el botón para que desaparezca el indicador RANDOM.

Reproducción programada

Se pueden programar hasta 20 pistas para reproducirlas en el orden deseado.

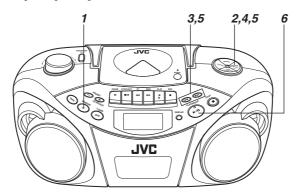


Nota:

Hay un tiempo límite para realizar los siguientes pasos. Si el ajuste se cancela antes de acabar, comience de nuevo por el paso 2.

- 1 Presione CD/RANDOM para entrar en el modo
- 2 Presione PROGRAM/CLOCK SET en modo parada.

El indicador PROG comienza a parpadear en el visualizador.

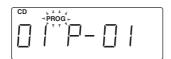

3 Presione | ◀ ▼ o ▶ ▶ | para seleccionar la pista que desee programar.



- 4 Presione PROGRAM/CLOCK SET.
- 5 Repita los pasos 3 y 4 para programar otras pistas.
- 6 Presione PLAY/PAUSE ►/II mientras parpadea el indicador PROG.

Las pistas se reproducen en el orden programado.

Notas:

- Si el indicador PROG desaparece antes de presionar PLAY/PAUSE ►/II, presione PROGRAM/CLOCK SET y, a continuación, se iniciará la reproducción.
- Si presiona CD/RANDOM mientras está en modo CD, la unidad entra en modo de reproducción aleatoria.

Para detener la reproducción

Presione STOP ■.

El indicador PROG desaparece y la unidad sale de la reproducción programada.

Para comprobar el contenido del programa

Antes de iniciar la reproducción programada, presione PROGRAM/CLOCK SET.

Cada vez que pulsa el botón, las pistas programadas se muestran en el visualizador.

Para añadir pistas al programa

- 1 Presione repetidamente PROGRAM/CLOCK SET hasta que "00" aparezca como el número de pista.
- 2 Presione | ◀ o ▶ | para seleccionar el número de pista y, a continuación, presione PROGRAM/ CLOCK SET.

Para editar el programa

- 1 Presione repetidamente PROGRAM/CLOCK SET hasta que aparezca el número de programa que desee editar.
- 2 Presione | ◀ o ▶ | para seleccionar un nuevo número de pista y, a continuación, presione PROGRAM/CLOCK SET.

Para repetir la reproducción programada

Presione PRESET + / CD REPEAT después de iniciar la reproducción programada.

Para borrar todo el programa de la memoria

Presione PROGRAM/CLOCK SET de modo que el indicador PROG parpadee y presione STOP ■ mientras el indicador PROG parpadee.


También se cancela el programa memorizado cuando se abra la tapa del disco.

Nota:

Después de programar 20 pistas, el número de programa vuelve a "1". La programación de más pistas sobreescribe las pistas ya programadas con esos números.

RECEPCIÓN DE LA RADIO

Sintonización de una emisora

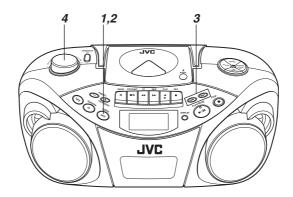

- 1 Presione BAND/TUNER para entrar en el modo de sintonizador.
- 2 Presione BAND/TUNER para seleccionar la banda, FM o AM.
- 3 Mantenga presionado |◀◀ o ▶▶| durante más de 1 segundo.

La unidad empieza a buscar y se detiene cuando sintoniza una emisora de señal fuerte.

Si presiona breve y rápidamente el botón $\bowtie \blacktriangleleft$ o $\triangleright \triangleright$ l, la frecuencia cambia paso a paso.

4 Ajuste el volumen.

Cambie el modo de recepción de FM

Cuando apenas se reciben emisiones de FM en estéreo o si hay ruidos, la recepción mejora en monoaural.

Presione FM MODE hasta que el indicador MONO aparezca en el visualizador.

Para recuperar el efecto estéreo, presione de nuevo FM MODE de modo que el indicador MONO desaparezca.




Nota:

El ajuste del modo de recepción de FM se cancelará cuando sintonice otra emisora.

Utilización de las antenas

FΜ

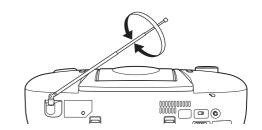

AM




Nota:

La antena con núcleo de ferrita integrado puede recibir interferencias de receptores de televisión en las cercanías, distorsionando la recepción de AM.

Presintonización de emisoras

Puede presintonizar 10 emisoras de FM y 10 de AM.

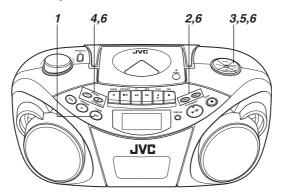

Hay un límite de tiempo para realizar los siguientes pasos. Si el ajuste se cancela antes de acabar, comience de nuevo desde el paso 3.

Nota:


En algunos casos, las frecuencias de prueba ya se han memorizado para el sintonizador, ya que la fábrica examinó la función de presintonización del sintonizador antes del transporte. No se trata de un funcionamiento defectuoso. Puede presintonizar las emisoras que desee en la memoria siguiendo el método de presintonización.

- 1 Presione BAND/TUNER para seleccionar la banda. FM o AM.
- 2 Presione | ◀ ▼ o ▶ ▶ | para sintonizar la emisora que desee presintonizar.
- 3 Presione PROGRAM/CLOCK SET.
 El indicador PROG comienza a parpadear en

El indicador PROG comienza a parpadear en el visualizador.



4 Presione PRESET + / CD REPEAT o PRESET - para seleccionar el número presintonizado.

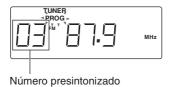

5 Presione PROGRAM/CLOCK SET.

La emisora sintonizada en el paso 2 se almacena en el número presintonizado seleccionado en el paso 4. Si almacena una nueva emisora con un número utilizado, se borra la emisora previamente almacenada.

6 Repita los pasos 2 a 5 para presintonizar otras emisoras, utilizando diferentes números presintonizados.

Sintonización de presintonías

- 1 Presione BAND/TUNER para seleccionar la banda, FM o AM.
- 2 Presione repetidamente PRESET + / CD REPEAT o PRESET - hasta que aparezca el número presintonizado deseado.

Nota:

Si desenchufa el cable de alimentación de CA o si se produce un corte de energía, las presintonías se borrarán al cabo de unos días. Si esto sucede, vuelva a presintonizar las emisoras.

REPRODUCCIÓN DE CASETES

Notas acerca de las cintas de casete

- Utilice sólo cintas normales de tipo I. Las características de grabación/reproducción de esta unidad son las de las cintas normales, que tienen diferentes características a las de las cintas de CrO₂ y metal.
- No se recomienda la utilización de cintas de más de 120 minutos debido a que puede producirse un deterioro de las características y estas cintas se atascan fácilmente en el rodillo y cabrestante.
- Una cinta floja puede provocar problemas. Apriete suavemente la cinta con un lápiz tal como aparece en la siguiente figura.




• Para evitar que se borren accidentalmente las grabaciones, rompa la(s) lengüeta(s) con un destornillador. Después de romper las lengüetas, vuelva a tapar las ranuras con cinta adhesiva para borrar o volver a grabar la cinta.



Colocación de un casete


- 1 Presione STOP/EJECT ■/▲ para abrir el casetero.
- 2 Coloque un casete con el lado abierto hacia arriba y el lado de reproducción hacia afuera como se muestra en la siguiente figura.

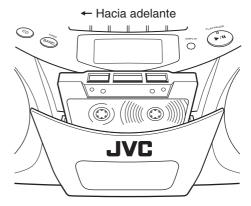

3 Cierre el casetero presionándolo suave y firmemente.

El casetero se ajusta en su posición.

Funcionamiento básico

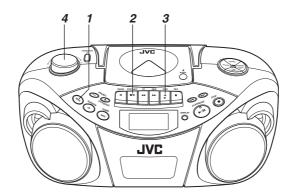

- 1 Presione TAPE para entrar en el modo de cinta.
- 2 Coloque un casete.

Utilice sólo cintas normales de tipo I.

- 3 Presione PLAY ◀ para iniciar la reproducción.
- 4 Ajuste el volumen.

Para detener la reproducción

Presione STOP/EJECT ■/**△**.

La cinta también se detiene cuando llega al final.


Bobinado rápido de una cinta

Presione REW ▶▶ o FF ◄◄.

Cuando la cinta llegue al final, presione STOP/EJECT

/▲ para liberar REW ▶▶ o FF ◄◄.

Funcionamiento básico

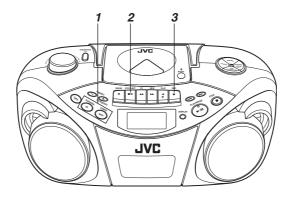

Grabación normal

1 Prepare la fuente de grabación.

- Cuando grabe de la radio:
 Ajuste al modo de sintonizador y sintonice una emisora deseada.
- Cuando grabe de un CD:
 Ajuste al modo CD y coloque un CD.

2 Coloque un casete virgen o borrable. Utilice sólo cintas normales de tipo-I.

3 Presione REC ●.

PLAY ◀ también se presiona y comienza la grabación.

Para detener la grabación

Presione STOP/EJECT ■/**△**.

La cinta también se detiene cuando llega al final.

Notas:

- Debe tenerse en cuenta que puede estar prohibida la regrabación de cintas, grabaciones o discos pregrabados sin el consentimiento del propietario de los derechos de autor en la grabación, emisión o programas por cable de sonido o video y en cualquier trabajo literario, dramático, musical o artístico allí plasmado.
- El nivel de grabación se ajusta automáticamente de modo correcto, de manera que no se ve afectado por VOLUME. Por lo tanto, durante la grabación puede ajustar el sonido que está escuchando sin afectar al nivel de la grabación.
- Si la grabación presenta mucho ruido o estática, puede que la unidad estuviera demasiado cerca de un TV encendido durante la grabación. Apague el TV o aumente la distancia entre el TV y la unidad.

Utilización de la función de supresión de ruido

Cuando se graba una emisión de AM, pueden escucharse ruidos. Si esto sucede, cambie el interruptor BEAT CUT de la parte posterior de la unidad a"1" o "2" para reducir los ruidos.



Para iniciar la grabación en el momento exacto


- 1 Presione primero PAUSE II y, a continuación, presione REC ●, y entrará en el modo de pausa de la grabación (modo de espera).
- 2 Presione PAUSE II para que se mueva la cinta en el momento exacto en que desea empezar a grabar.

Nota:

No deje la unidad en el modo de pausa durante más de unos minutos. En su lugar, presione el botón STOP/ EJECT ■/▲ para detener la cinta.

Grabación sincronizada con la reproducción del CD

Puede hacer que el reproductor de CDs comience a reproducir cuando la platina entra en el modo de grabación.

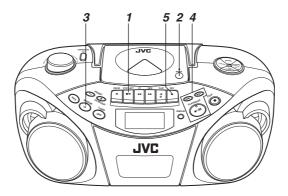

1 Coloque un casete.

Utilice sólo cintas normales de tipo I.

- 2 Coloque un CD.
- 3 Presione CD/RANDOM para entrar en el modo CD.
- 4 Especifique una pista o punto en el disco para iniciar la grabación.

 - Para iniciar la grabación desde el punto deseado de un disco, reproduzca el disco y haga una pausa en el punto deseado presionando PLAY/PAUSE ►/II.

5 Presione REC ●.

 El indicador CD SYNC aparece en el visualizador durante la grabación sincronizada. Si la cinta llega primero al final, el reproductor de CDs entra en modo de pausa. Presione PLAY/PAUSE ►/II para continuar la reproducción, o presione STOP ■ para detener la reproducción.

Si el reproductor de CDs se detiene primero, la cinta continúa funcionando. En este caso, presione STOP/EJECT ■/▲ para detener la cinta.

Borrado

Cuando se graba sobre una cinta pregrabada, la grabación anterior se borra y la próxima vez que reproduzca la cinta sólo se escuchará la nueva grabación.

Para borrar una cinta sin hacer una nueva grabación

- 1 Presione TAPE en la unidad para entrar en el modo de cinta.
- 2 Presione REC ●.

MANTENIMIENTO


Limpieza de los cabezales, cabrestante y rodillo

¡La limpieza es importante!

Cuando la cinta está en marcha, el polvo magnético y la suciedad se acumulan naturalmente en los cabezales, cabrestante y rodillo. Cuando se ensucian mucho;

- Se deteriora la calidad del sonido.
- Baja el nivel de salida del sonido.
- La grabación anterior no se borra completamente.
- · La grabación no se realiza bien.

Para evitar estos problemas, limpie los cabezales, cabrestante y rodillo cada 10 horas de uso.

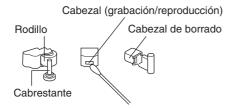

Abra el casetero. Limpie los cabezales, cabrestante y rodillo.

Para una limpieza efectiva, utilice un kit de limpieza disponible en las tiendas de audio.

Después de la limpieza, asegúrese de que el líquido de limpieza se ha secado completamente antes de colocar un casete.

Precauciones:


- Mantenga alejados los imanes y objetos metálicos del cabezal. Si el cabezal se imanta, el ruido aumenta y se deteriora el sonido.
- Desmagnetice el cabezal de grabación/reproducción cada 20 o 30 horas de uso con un desmagnetizador disponible en las tiendas de audio. Cuando desmagnetice el cabezal, la unidad debe estar apagada.
 Como el cabezal de borrado de la unidad es de tipo magnético, no lo desmagnetice.
- No utilice otro limpiador que no sea alcohol para limpiar. El disolvente y la bencina dañarán el rodillo de caucho.

Limpieza de la lente receptora de CDs

Si la lente receptora de CDs está sucia, el sonido puede perder calidad.

Abra la tapa del disco y limpie la lente.

Utilice un soplador (disponible en las tiendas de cámaras, etc.) para eliminar el polvo de la lente.

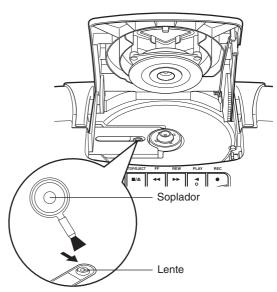

SOLUCIÓN DE PROBLEMAS

- Si tiene problemas con su unidad, consulte las posibles soluciones de la siguiente lista antes de llamar a un centro de asistencia técnica.
- Si no puede resolver el problema con los siguientes consejos, o si la unidad de ha dañado físicamente, llame a una persona cualificada, como su distribuidor, para llevar a cabo la reparación.


Síntoma	Posible causa	Solución
No puede encenderse la unidad.	El cable de alimentación está desenchufado.	Enchufe el cable de alimentación.
Cuando se presiona PLAY ◀ la cinta no se mueve.	PAUSE ■ está presionado.	Presione de nuevo PAUSE II para soltarlo.
El sonido de reproducción está a un nivel muy bajo.	Las pilas están agotadas. El cabezal está sucio.	Cambie las pilas por unas nuevas. Limpie el cabezal.
REC ● no funciona.	 Las lengüetas de seguridad del casete están rotas. No hay ningún casete insertado. 	 Vuelva a sellar las ranuras con cinta adhesiva. Inserte un casete.
El disco está insertado pero no reproduce.	 El disco está colocado al revés. El disco está sucio. El disco está dañado o deformado. La lente está sucia. Hay condensación de humedad. 	 Inserte el disco con la cara de la etiqueta hacia arriba. Limpie el disco. Cambie el disco por uno que pueda reproducirse. Limpie la lente. Encienda la unidad y espere una o dos horas antes de utilizarla.
No se escucha ningún sonido por los altavoces.	Los auriculares están conectados.	Desconecte los auriculares.
Como la velocidad de la cinta es irregular, se produce fluctuación y trémolo.	El rodillo o cabrestante está sucio. Las pilas están agotadas.	Limpie el rodillo y cabrestante.Cambie las pilas por unas nuevas.
La recepción de la radio es mala y hay mucha estática.	La antena no está ajustada adecuadamente.	Ajuste la antena adecuadamente.

Nota:

Cuando se mueve la unidad de un lugar frío de unos 0°C (32°F) a un lugar caliente, puede no funcionar normalmente porque se formó humedad dentro de la pletina. El funcionamiento normal se recuperará después de esperar una o dos horas.

Reajuste de la unidad

Si "SOLUCIÓN DE PROBLEMAS" no eliminó el funcionamiento defectuoso (no funciona o no se visualiza correctamente, etc.), presione el botón RESET de la parte posterior de la unidad con algún objeto que tenga punta afilada, mientras la unidad está encendida.

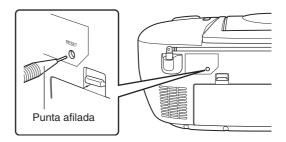

Nota:

El reajuste hace que la unidad recupere los ajustes de fábrica y se borren todos los ajustes realizados por el usuario.

ESPECIFICACIONES

Reproductor de CDs

Capacidad de CDs : 1 CD Relación señal-ruido : 75 dB Gama dinámica : 60 dB

Sintonizador

Gama de frecuencias : FM 87,5 – 108,0 MHz

AM 530 – 1 710 kHz

Antenas : Antena telescópica para FM

Antena de núcleo de ferrita

para AM

Pletina

Respuesta de frecuencia: 60 Hz – 10 000 Hz Fluctuación y trémolo : 0,15% (WRMS)

Tiempo de bobinado

rápido : Aprox. 150 seg.

(casete C-60)

General

Altavoces : Cono 9 cm $(3,5") \times 2$

Impedancia de

los altavoces : 4 Ω

Potencia de salida : 2 W por canal, mín. RMS,

 $4~\Omega~a~1~kHz$ con distorsión armónica total no superior al

10%

Terminales de salida : PHONES \times 1

Suministro eléctrico : 120 V CA √, 60 Hz

9 V CC (pilas R20 (SUM-1)/

 $D(13D) \times 6$

Consumo : 13 W (en funcionamiento)

3 W (en modo de espera)

Dimensiones : $420 \text{ mm} \times 178 \text{ mm} \times$

250 mm (An./Al./Prf.) (16⁹/₁₆" × 7¹/₁₆" × 9⁷/₈")

: Aprox. 3,2 kg (7,1 lbs)

(sin pilas)

Accesorios

Peso

suministrados : Cable de alimentación

de $CA \times 1$

El diseño y las especificaciones están sujetos a cambios sin previo aviso.



PLEASE COMPLETE THE FOLLOWING;

WARRANTY REPAIR / REPLACEMENT FORM

PLEASE NOTE: P. O. BOXES ARE NOT ACCEPTABLE NAME: ____ STREET ADDRESS: STATE ZIPCODE DAY TIME PHONE NUMBER: \$ 19.95 (FOR PRODUCT MORE THAN 90 DAYS, BUT LESS LABOR, S/H CHARGE THAN 365 DAYS FROM RETAIL PURCHASE) LOCAL SALES TAX TOTAL PAYMENT **METHOD OF PAYMENT** _____ CHECK OR MONEY ORDER ENCLOSED CREDIT CARD **ACCOUNT NUMBER EXP. DATE** ___ VISA ___ MASTERCARD ___ DISCOVER CARD HOLDER NAME **CARD HOLDER SIGNATURE** (IF DIFFERENT FROM ABOVE) REASON FOR RETURN _____ BE SURE TO ENCLOSE COMPLETED FORM, A COPY OF YOUR BILL OF SALE, PAYMENT (IF APPLI-CABLE), SUPPLIED ACCESSORIES, TOGETHER WITH THE PRODUCT AND RETURN TO THE JVC REPAIR/REPLACEMENT FACILITY NEAREST YOU.

TO OBTAIN THE ADDRESS OF THE LOCATION NEAREST YOU <PLEASE CALL (800) 252-5722 OR

VISIT OUR WEBSITE AT HTTP://WWW.JVC.COM



LIMITED WARRANTY

PORTABLE AUDIO EXCHANGE 1-90

JVC COMPANY OF AMERICA warrants this portable audio product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of the original retail purchase for the period shown below. ("The Warranty Period")

LABOR 90 DAYS

PARTS 1 YR

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN THE COMMONWEALTH OF PUERTO RICO.

WHAT WE WILL DO:

If this product is found to be defective within the warranty period, JVC will, at its option, either repair or replace the defective part(s) or replace the product with a new or refurbished functionally equivalent product. Within 90 days from date of retail sale, repair or replacement will be at no charge to the customer. From 91 to 365 days from the date of retail sale, a charge for labor plus shipping and handling will apply. Please refer to the attached warranty repair/replacement form for the amount of this charge.

WHAT YOU MUST DO FOR WARRANTY SERVICE:

<u>Please do not return your product to the retailer.</u> Instead, please box the product carefully, preferably in the original carton, and ship insured to the JVC repair/replacement facility nearest you.

To obtain the address of the location nearest you, please call (800) 252-5722 or visit our website at http://www.jvc.com

PLEASE BE SURE TO INCLUDE A COPY OF YOUR BILL OF SALE, A COMPLETED WARRANTY REPAIR/REPLACEMENT FORM AND ALL OF THE ORIGINAL ACCESSORIES WHICH CAME WITH YOUR UNIT. IF APPLICABLE, PLEASE INCLUDE PAYMENT AS INDICATED ON ATTACHED REPAIR/REPLACEMENT FORM

If you have any questions concerning your JVC Product, please contact our Customer Relations Department at (800) 252-5722.

WHAT IS EXCLUDED:

The warranty does not cover:

- 1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed.
- 2. Initial installation, installation and removal, from "built in" entertainment centers, and other mounting systems.
- 3. Operational adjustments covered in the Owner's Manual, normal maintenance, including head cleaning.
- 4. Damage that occurs in shipment, due to act of God, and cosmetic damage.
- 5. Signal reception problems and failures due to line power surge.
- 6. Products used for commercial purposes (including but not limited to rental).
- 7. Accessories.
- 8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase).

There are no express warranties except as listed above.

AFTER THE WARRANTY:

Please contact JVC's Customer Relations Department at (800) 252-5722 to obtain the cost of out of warranty repair or replacement.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC COMPANY OF AMERICA DIVISION OF JVC AMERICAS CORP.

1700 Valley Road Wayne, New Jersey 07470

http://www.jvc.com

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY THIS WARRANTY DOES NOT APPLY. FOR DETAILS OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

For customer use: Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabine Retain this information for future reference.		
N	Model No.:	Serial No.:
F	Purchase Date:	Name of Dealer:

